IR Eyeball Network Camera

Quick Start Guide



Foreword

General

This manual introduces the functions, installation and operations of the camera.

Safety Instructions

The following categorized signal words with defined meaning might appear in the manual.

Signal Words	Meaning
	Indicates a high potential hazard which, if not avoided, will result in death or serious injury.
	Indicates a medium or low potential hazard which, if not avoided, could result in slight or moderate injury.
	Indicates a potential risk which, if not avoided, may result in property damage, data loss, lower performance, or unpredictable result.
© TIPS	Provides methods to help you solve a problem or save you time.
	Provides additional information as the emphasis to the text.

Revision History

Version	Revision Content	Release Date
V1.0.2	Updated SD card installation.	November 2021
V1.0.1	Updated "Important Safeguards and Warnings."	April 2021
V1.0.0	First release.	March 2018

Privacy Protection Notice

As the device user or data controller, you might collect the personal data of others such as their face, fingerprints, and license plate number. You need to be in compliance with your local privacy protection laws and regulations to protect the legitimate rights and interests of other people by implementing measures which include but are not limited: Providing clear and visible identification to inform people of the existence of the surveillance area and provide required contact information.

About the Manual

- The manual is for reference only. Slight differences might be found between the manual and the product.
- We are not liable for any loss caused by the operations that do not comply with the manual.
- The manual would be updated according to the latest laws and regulations of related jurisdictions. For detailed information, refer to the paper manual, CD-ROM, QR code or our
 - L

official website. If there is inconsistency between paper manual and the electronic version, the electronic version shall prevail.

- All the designs and software are subject to change without prior written notice. The product updates might cause some differences between the actual product and the manual. Please contact the customer service for the latest program and supplementary documentation.
- There still might be deviation in technical data, functions and operations description, or errors in print. If there is any doubt or dispute, we reserve the right of final explanation.
- Upgrade the reader software or try other mainstream reader software if the manual (in PDF format) cannot be opened.
- All trademarks, registered trademarks and the company names in the manual are the properties of their respective owners.
- Please visit our website, contact the supplier or customer service if there is any problem occurring when using the device.
- If there is any uncertainty or controversy, we reserve the right of final explanation.

Important Safeguards and Warnings

Electrical safety

- All installation and operation should conform to your local electrical safety codes.
- The power supply must conform to the requirements of ES1 in IEC 62368-1 standard and be no higher than PS2. Note that the power supply requirements are subject to the device label.
- Make sure the power supply is correct before operating the device.
- A readily accessible disconnect device shall be incorporated in the building installation wiring.
- Prevent the power cable from being trampled or pressed, especially the plug, power socket and the junction extruded from the device.

Environment

- Do not aim the device at strong light to focus, such as lamp light and sun light; otherwise it might cause over brightness or light marks, which are not the device malfunction, and affect the longevity of Complementary Metal-Oxide Semiconductor (CMOS).
- Do not place the device in a damp or dusty environment, extremely hot or cold temperatures, or the locations with strong electromagnetic radiation or unstable lighting.
- Keep the device away from any liquid to avoid damage to the internal components.
- Keep the indoor device away from rain or damp to avoid fire or lightning.
- Keep sound ventilation to avoid heat accumulation.
- Transport, use and store the device within the range of allowed humidity and temperature.
- Heavy stress, violent vibration or water splash are not allowed during transportation, storage and installation.
- Pack the device with standard factory packaging or the equivalent material when transporting the device.
- Install the device in the location where only the professional staff with relevant knowledge of safety guards and warnings can access. The accidental injury might happen to the non-professionals who enter the installation area when the device is operating normally.

Operation and Daily Maintenance

- Do not touch the heat dissipation component of the device to avoid scald.
- Carefully follow the instructions in the manual when performing any disassembly operation about the device; otherwise, it might cause water leakage or poor image quality due to unprofessional disassembly. Please make sure that the gasket ring is flat and properly installed in the groove before installing the cover. Please contact after-sale service for desiccant replacement if there is condensed fog on the lens after unpacking or when the desiccant turns green (Not all models are included with the desiccant).
- We recommend using the device together with lightning arrester to improve lightning protection effect.
- We recommend grounding the device to enhance reliability.
- Do not touch the image sensor directly (CMOS). Dust and dirt could be removed with air blower, or you can wipe the lens gently with soft cloth that moistened with alcohol.

- You can clean the device body with soft dry cloth, and for stubborn stains, use the cloth with mild detergent. To avoid possible damage on device body coating which could cause performance decrease, do not use volatile solvent such as alcohol, benzene, diluent to clean the device body, nor can strong, abrasive detergent be used.
- Dome cover is an optical component, do not touch or wipe the cover with your hands directly during installation or operation. For removing dust, grease or fingerprints, wipe gently with moisten oil-free cotton with diethyl or moisten soft cloth. You can also air blower to remove dust.

- Strengthen the protection of network, device data and personal information by adopting
 measures which include but not limited to using strong password, modifying password
 regularly, upgrading firmware to the latest version, and isolating computer network. For some
 device with old firmware versions, the ONVIF password will not be modified automatically along
 with the modification of the system password, and you need to upgrade the firmware or
 manually update the ONVIF password.
- Use standard components or accessories provided by manufacturer and make sure the device is installed and maintained by professional engineers.
- Do not expose the surface of the image sensor to laser beam radiation in an environment where a laser beam device is used.
- Do not provide two or more power supply sources for the device unless otherwise specified. A failure to follow this instruction might cause damage to the device.

Table of Contents

Foreword	I
Important Safeguards and Warnings Il	
1 Introduction	1
2 Network Configuration	2
2.1 Initializing Device	2
2.2 Changing Device IP Address	4
2.3 Logging in to Web Page	5
3 Installation	б
3.1 Packing List	б
3.2 Dimension	б
3.3 Installing Device	7
3.3.1 Installation Method	
3.3.2 Install SD Card (Optional)	8
3.3.3 Attaching Device	8
3.3.4 Installing Waterproof Connector10	
3.3.5 Adjusting Angle1	1

1 Introduction



Waterproof all the cable joints with insulating tape and waterproof tape to avoid short circuit and water damage. For the detailed operation, see FAQ manual.

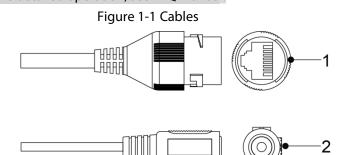


Table 1-1 Cable Information

No.	Port Name	Function						
1	Ethernet Port	Connects to network with network cable.						
		 Provides power to the device with PoE. 						
		PoE is available on select model.						
2	Power Input	Inputs 12 VDC power. Please be sure to supply power as instructed in the Guide.						
		Device abnormity or damage could occur if power is not supplied correctly.						

2 Network Configuration

Device initialization and IP setting can be finished with the ConfigTool or in web page. For more information, see WEB operation manual.

 \square

- Device initialization is available on select models, and it is required at first use and after device is being reset.
- Device initialization is available only when the IP addresses of the device (192.168.1.108 by default) and the PC stays in the same network segment.
- Planning useable network segment properly to connect the device to the network.
- The following figures and interfaces are for reference only.

2.1 Initializing Device

- <u>Step 1</u> Double-click ConfigTool.exe to open the tool.
- Step 2 Click Modify IP
- Step 3 Click Search Setting.

Figure 2-1 Setting

Start IP	100 . 100 . 1 . 1	End IP	100	
Username	admin	Password	••••	

<u>Step 4</u> Select the searching way.

• Current Segment Search (default)

Select the **Current Segment Search** checkbox. Enter the username in the **Username** box and the password in the **Password** box. The system will search devices accordingly.

Other Segment Search
 Select the Other Segment Search checkbox. Enter IP address in the Start IP box and
 End IP box respectively. Enter user name and password. The system will search the devices accordingly.

\square

- If you select the **Current Segment Search** checkbox and the **Other Segment Search** checkbox together, the system searches for devices under both conditions.
- Enter the username and the password when you want to change IP, configure the system, update the device, restart the device, and more.

Step 5 Click OK.

- <u>Step 6</u> Select one or several devices in uninitialized status, and then click **Initialize**.
- <u>Step 7</u> Select the devices to be initialized, and then click **Initialize**.

 \square


- If you do not provide the linked information for password reset, you can reset the password only through XML file.
- When initializing multiple devices, ConfigTool initializes all devices based on the password reset mode of the first selected device.

Figure 2-2 Password setting

Device initialization	×				
1	device(s) have not been initialized				
Username	admin				
New Password	•••••				
Confirm Password	Weak Medium Strong •••••••• Use a password that has 8 to 32 characters, it can be a combination of letter(s), number(s) and symbol(s) with at least two kinds of them. (excluding Single quote("), double quote("), colon(:), semicolon(;), connection symbol(&))				
Email Address	1****6@gmail.com (for password reset)				
Select P/N	PAL 🔻				
*After you have set new	password, please set password again in "Search Setting".				
	Next				

<u>Step 8</u> Set and confirm the password of the devices, then enter a valid email address, and then click **Next**.

Figure 2-3 Device initialization

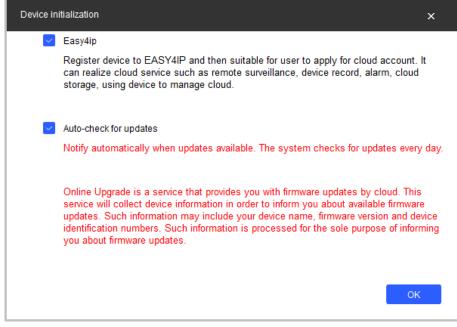

- <u>Step 9</u> Select **Easy4ip** or select **Auto-check for updates** according to the actual needs. If neither, leave them unselected.
- <u>Step 10</u> Click **OK** to initialize the device. Click the success icon (\checkmark) or the failure icon (\triangleq) for the details.
- Step 11 Click Finish.

2.2 Changing Device IP Address

- You can change IP address of one or multiple devices in one time. This section is based on changing IP addresses in batches.
- Changing IP addresses in batches is available only when the corresponding devices have the same login password.
- <u>Step 1</u> Follow Step 1 to Step 4 in "2.1Initializing Device" to search devices in your network segment.

After clicking **Search setting**, enter the **username** and **password**, and make sure they are the same as what you set during initialization, otherwise there will be wrong password notice.

<u>Step 2</u> Select the devices which IP addresses need to be modified, and then click **Batch Modify IP**.

Figure 2-4 Change IP Address

Modify IP Address					×
Mode	 Static 	0	DHCP		
Start IP		÷	·	Same IP	
Subnet Mask		· .	·		
Gateway	· · ·	÷			
Selected number of device	s: 11				OK

<u>Step 3</u> Select **Static** mode and enter start IP, subnet mask and gateway.

- IP addresses of multiple devices will be set to the same if you select the **Same IP** checkbox.
- If DHCP server is available in the network, devices will automatically obtain IP addresses from DHCP server when you select **DHCP**.
- Step 4 Click OK.

 \square

2.3 Logging in to Web Page

<u>Step 1</u> Open IE browser, enter the IP address of the device in the address bar and then press the Enter key.


If the setup wizard is displayed finish the settings as instructed.

- <u>Step 2</u> Enter the username and password in the log in box, and then click **Login**.
- <u>Step 3</u> For first-time login, click **Click Here to Download Plugin** and install the plugin as instructed. The home page is displayed when the installation is finished.


3 Installation


3.1 Packing List

- The tools required for the installation including electric drill are not provided in the packing.
- The operation manual and related tool information are contained in the disk or the QR code.

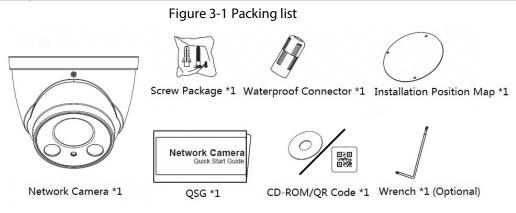

3.2 Dimension

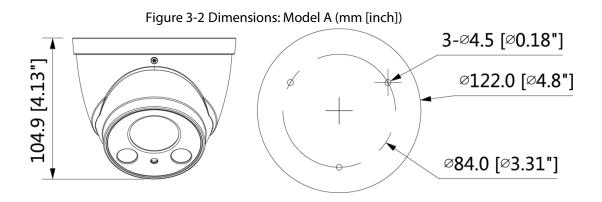

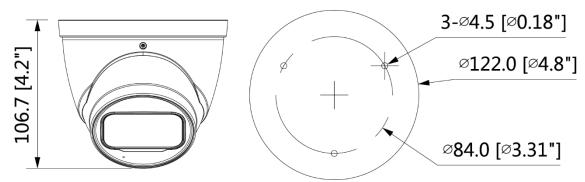

3.3 Installing Device

3.3.1 Installation Method



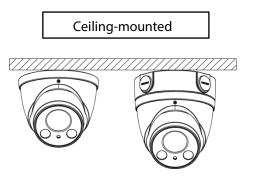



Figure 3-4 Installation method

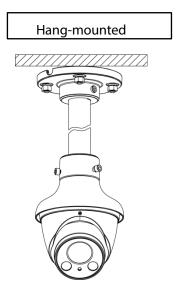

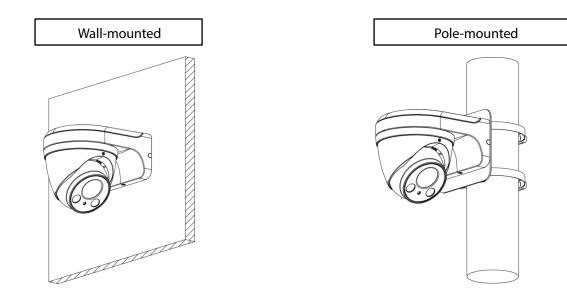

3.3.2 Install SD Card (Optional)

- SD card slot is available on select models.
- Please disconnect the power from the device before installing the SD card.
- Press the reset button for 10 seconds to reset the device.

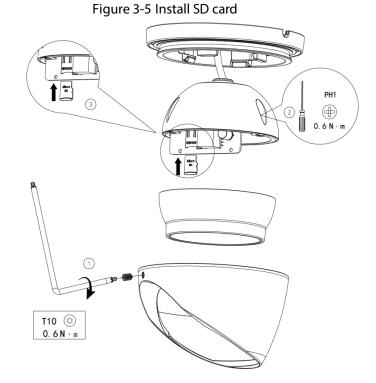

3.3.3 Attaching Device

A

Make sure the mounting surface is strong enough to hold at least three times of the device weight.


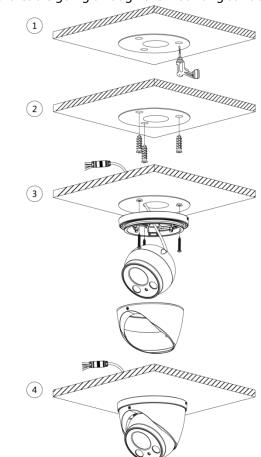


Figure 3-6 Cable going through the mounting surface


Figure 3-7 Cable going through the side cable tray

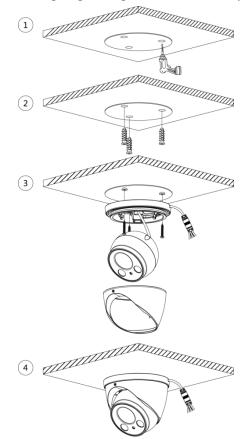



3.3.4 Installing Waterproof Connector


This part is only needed when a waterproof connector comes with the device and the device is used outdoors.

     
Figure 3-8 Install waterproof connector











3.3.5 Adjusting Angle

